

# Guide Book on Backhaul Design




## Introduction

Most installers know that clear line of sight is required between two antennas, but there is a lot more to it than that. In this article, the basics of designing and planning a microwave radio link will be discussed.

## Free Space Loss

As signals spread out from a radiating source, the energy is spread out over a larger surface area. As this occurs, the strength of that signal gets weaker. Free space loss (FSL), measured in dB, specifies how much the signal has weakened over a given distance.

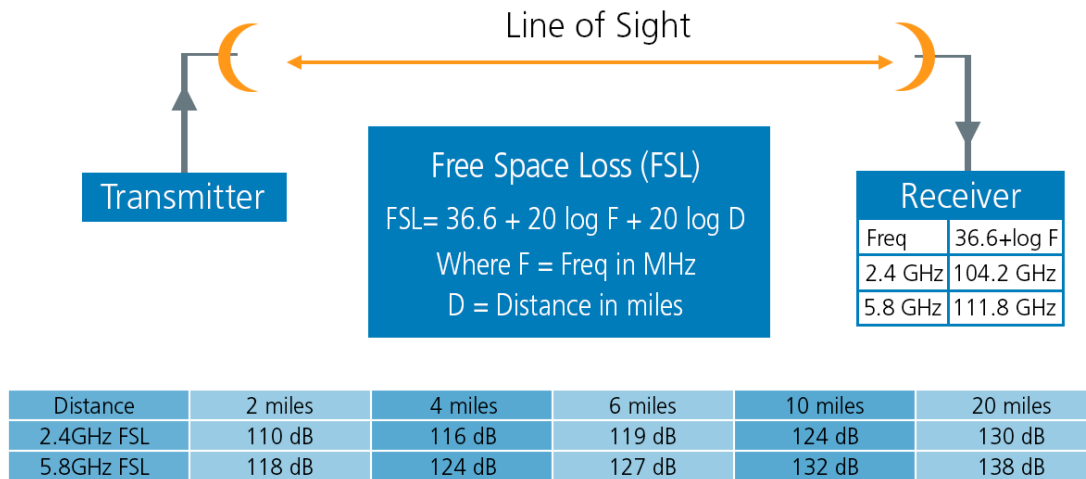

Rule of Thumb: Double / halve the distance - Add/Subtract 6 dB.

Figure 1


Figure 1 shows the formula to calculate FSL and what the theoretical loss would be at sample distances. The type of antenna used has no effect on FSL, since at any appreciable distance all antennas look like a point-source radiator. Note that the difference in FSL between a 2.4 GHz link and a 5.8 GHz link is always about 8 dB, regardless of the distance. This is one of the reasons why 802.11a wireless local area network (WLAN) devices will have less than half the range of a 2.4 GHz WLAN device (e.g., 802.11b).

## Fresnel Zone

Radio waves travel in a straight line, unless something refracts or reflects them. But the energy of radio waves is not “pencil thin.” They spread out the farther they get from the radiating source — like ripples from a rock thrown into a pond.

The area that the signal spreads out into is called the Fresnel zone (pronounced fra-nell ). If there is an obstacle in the Fresnel zone, part of the radio signal will be diffracted or bent away from the straight-line path. The practical effect is that on a point-to-point radio link, this refraction will reduce the amount of RF energy reaching the receive antenna.

The thickness or radius of the Fresnel zone depends on the frequency of the signal — the higher the frequency, the smaller the Fresnel zone. Figure 2 illustrates how the Fresnel zone is fattest in the middle. As with FSL, the antennas used have no effect on the Fresnel zone.

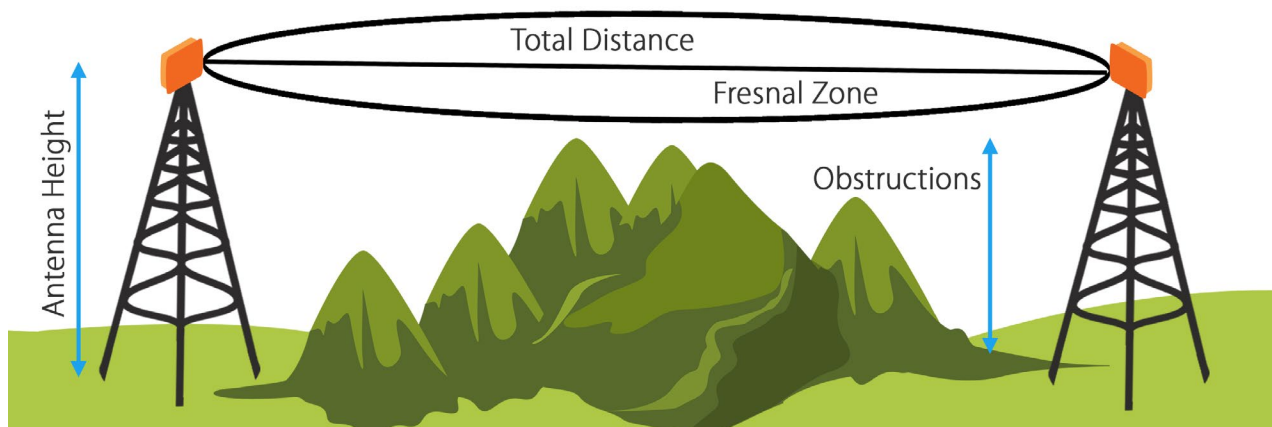

## Receive Signal Level

Receive signal level is the actual received signal level (usually measured in negative dBm) presented to the antenna port of a radio receiver from a remote transmitter.

## Receiver Sensitivity

Receiver sensitivity is the weakest RF signal level (usually measured in negative dBm) that a radio needs receive in order to demodulate and decode a packet of data without errors.

## Antenna Gain

Antenna gain is the ratio of how much an antenna boosts the RF signal over a specified low-gain radiator. Antennas achieve gain simply by focusing RF energy. If this gain is compared with an isotropic (no gain) radiator, it is measured in dBi. If the gain is measured against a standard dipole antenna, it is measured in dBd. Note that gain applies to both transmit and receive signals.

## Transmit Power

The transmit power is the RF power coming out of the antenna port of a transmitter. It is measured in dBm, Watts or milli Watts and does not include the signal loss of the coax cable or the gain of the antenna.

## Effective Isotropic Radiated Power

Effective isotropic radiated power (EIRP) is the actual RF power as measured in the main lobe (or focal point) of an antenna. It is equal to the sum of the transmit power into the antenna (in dBm) added to the dBi gain of the antenna. Since it is a power level, the result is measured in dBm. Figure 3 shows how +24 dBm of power (250 mW) can be “boosted” to +48 dBm or 64 Watts of radiated power.


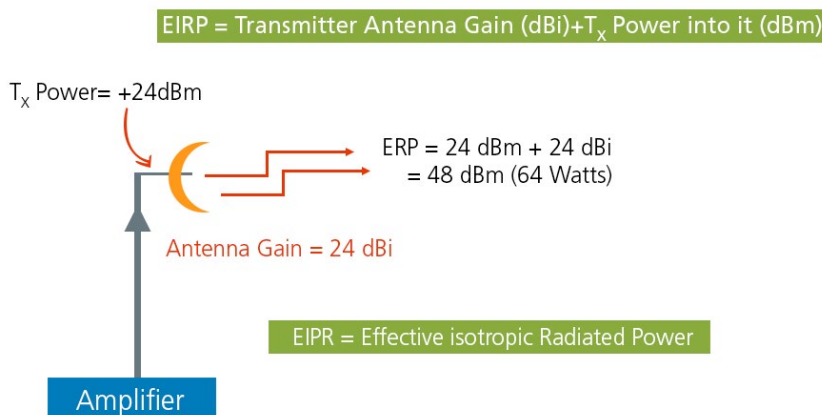


Figure 3

## Fade Margin

Fade margin is the difference (measured in dB) between the nominal signal level received at one end of a radio link and the signal level required by that radio to assure that a packet of data is decoded without error (see Figure 4).

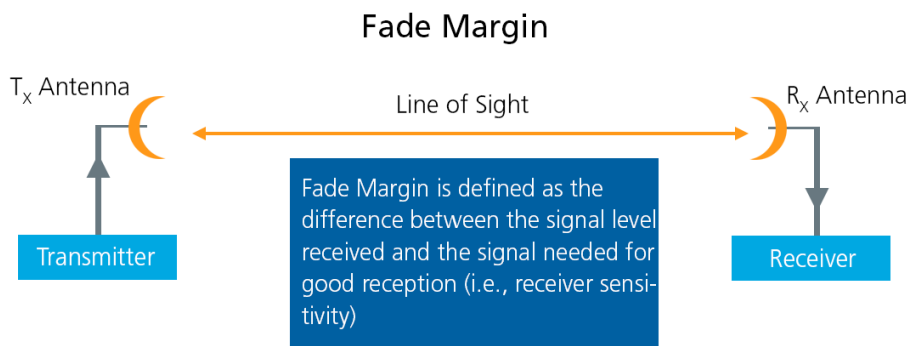

Fade Margin = Rx signal (dBm) - R<sub>x</sub> sensitivity (dBm)  
i.e., what you are getting minus what you need

Figure 4

In other words, Fade margin is the difference between the signal received and the radio's specified receiver's sensitivity. Fade margin is also referred to as link margin or system operating margin.

## Multi path Interference

When signals arrive at a remote antenna after being reflected off the ground or refracted back to earth from the sky (sometimes called ducting), they will subtract (or add) to the main signal and cause the received signal to be weaker (or stronger) throughout the day.

## Signal to Noise Ratio

Signal-to-noise ratio (SNR) is the ratio (usually measured in dB) between the signal level received and the noise floor level for that particular signal. The SNR is really the only thing receiver demodulators really care about. Unless the noise floor is extremely high, the absolute level of the signal or noise is not critical.

Figure 5 illustrates that weaker signals are larger negative numbers. It also graphically shows how the SNR is computed.

### Signal to Noise Ratio (SNR)

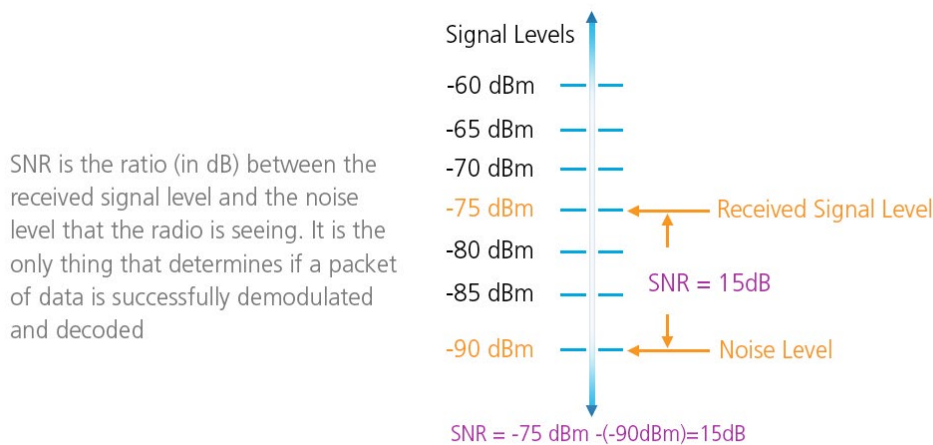


Figure 5

## First Step in Planning a Link

Whether your link is point-to-point or point-to-multipoint, the first thing to do is to verify that it will have not only clear line of sight, but at least 60 percent of the first Fresnel zone clear of obstructions as well. The longer the distance, the more important this is. If the Fresnel zone is blocked, then you will get a lower signal level on the distant end than expected — even if you can literally “see” the other antenna in the distance.

But even if your Fresnel zone is partially blocked, it is still possible to get a link, provided that your system was designed to have a strong signal at the other end of the link. In planning long-range microwave links where you are not sure that you have unobstructed line-of-site and clear Fresnel zone, an RF path analysis should be done. There are many software packages available that have terrain data and can create a path profile from a set of latitude/longitude coordinates. But these programs can only indicate for certain if a link will not work due to terrain obstruction. A clear path on paper is not a guarantee that your link will work, since it does not show trees or buildings. So even a “clear” link might have 80-foot trees in the way that could block the signal.

You could be wasting your time and money if you ignore Fresnel zone issues — or worse yet, no line-of-site — and attempt to set up a link anyway. You will likely not have a reliable link, if one at all. But assuming that you do have clear line-of-site and 60 percent of the first fresnel zone clear (or nearly clear), how can you know if you will have a good link or not? How much gain do your antennas need to have? How much coax cable loss is too much? If your link is at 2.4 GHz, should external amplifiers be used? Or given your fixed base station antenna with a pre-set gain, how far can you reach with the different types of client antennas? And which clients will need amplification?

## Why Perform an Fade Margin Calculation?

By doing a Fade margin calculation, you can test various system designs and scenarios to see how much safety cushion your link will theoretically have.

Figure 6 illustrates a sample Fade Margin calculation on a point-to-point link. It presumes that the antennas are aimed at each

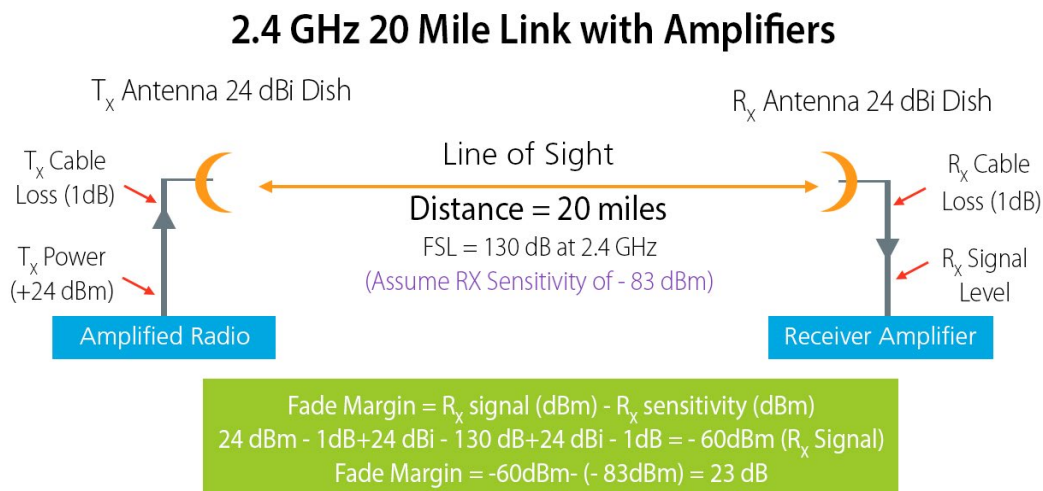


Figure 6

other properly (i.e., they are in each others' main lobe). To calculate Fade Margin in the example, start with the transmit power (+24 dBm), subtract the coax cable loss (1 dB) and add the transmit antenna gain (24 dBi). This gives you the effective isotropic radiated power:

$$\text{EIRP} = \text{TX Power} - \text{Coax Cable Loss} + \text{TX Antenna Gain}$$

Then subtract the FSL (130 dB), add the receiver antenna gain (24 dBi), subtract the coax cable loss (1 dB) and you get the signal reaching the receiver:

$$\text{RX Signal} = \text{EIRP} - \text{FSL} + \text{RX Antenna Gain} - \text{Coax Cable Loss}$$

Compute the difference between the received signal and the radio's receiver sensitivity to determine the Fade Margin. In this example, the received signal is -60 dBm and the receiver's sensitivity is -83 dBm, giving a theoretical Fade Margin of 23 dB.

## What Is the Minimum Fade Margin Needed?

Regarding the minimum Fade Margin needed, there is no absolute answer to this question, but the higher it is, the better. Most engineers agree that 20 dB or more is quite adequate. Some think as low as 14 dB is still good. Others operate systems down to 10 dB or less. The problem with accepting a lower Fade Margin is that you have a smaller safety margin. You run the risk of your link going down for such things as interference, an antenna off its aim, atmospheric conditions, moisture in your coax, ice on the radome, or a host of other gremlins. So while a 14 dB Fade Margin would work, there is not much margin.

## Real World Issues

In practice, the Fade Margin is not the only determining factor. It's the actual SNR at the receiver that makes a link reliable. If you are getting noise or interference on your channel, your SNR will deteriorate. This could be an issue if you are co-locating at a site with other radios operating in the same band. You need to find out what frequency spectrum these radios are occupying. If these transmitter have energy or sideband noise on your receive channel and their antennas are close to yours, you will likely get interference from them, perhaps to the point where your link will not work. Another consideration is that the Fade Margin calculation is for a vacuum. In fact, there is some atmospheric absorption of the RF energy that scatters and attenuates the signal. For example, tests on a 23-mile 5.8 GHz link vary as much as +/-6 dB over course of a day.

This variation is mostly caused by multi path interference and other atmospheric variations. Notice that with coax cable at the receiver and no amplifier at the receiver antenna, the SNR at the antenna does not survive when it actually reaches the radio itself. In this case, the noise generated in the RF front-end of the radio is a factor. Note that if you do use an amplifier on the receive end, as shown in Figure 6, the SNR as it appears at the antenna is preserved all the way down the coax to the radio. This phenomenon largely occurs because the low-noise amplifier mounted on the pole sets the noise floor for the system.

## About Proxim

Proxim Wireless Corporation (OTC Markets: PRXM) provides Wi-Fi<sup>®</sup>, Point-to-Point and Point-to-Multipoint 4G wireless network technologies for wireless internet, video surveillance and backhaul applications. Our ORiNOCO<sup>®</sup> and Tsunami<sup>®</sup> product lines are sold to service providers, governments and enterprises with over 2 million devices shipped to over 250,000 customers in over 90 countries worldwide. Proxim is ISO 9001-2008 certified. For more information, visit [www.proxim.com](http://www.proxim.com). For investor relations information, e-mail [ir@proxim.com](mailto:ir@proxim.com) or call +1 413-584-1425.



[www.proxim.com](http://www.proxim.com)

**Proxim Wireless Corporation**  
47633 Westinghouse Drive,  
Fremont, CA 94539, USA

Proxim<sup>®</sup> and Tsunami<sup>®</sup> are registered trademarks of Proxim<sup>®</sup> Wireless Corporation in the US Patent and Trademark Office. All other products or services are the property of their registered owners.

© Proxim Wireless. All rights reserved.